

Systems

SH_F Seat heating, front SH_R Seat heating, rear

Components

E25	Seat heating - Front, left	K184	Controller - Seat heating, front, right
E30	Seat heating - Front, right	P87	Sensor - Temperature, seat heating, left
E47	Seat heating - Rear seat, left	P90	Sensor - Temperature, seat heating, right
E48	Seat heating - Rear seat, right	S30	Switch - Seat heating, front, left
K65	Relay - Seat heating, rear seat, left	S55	Switch - Seat heating, front, right
K66	Relay - Seat heating, rear seat, right	S96	Switch - Seat heating, rear, left
K183	Controller - Seat heating, front, left	S97	Switch - Seat heating, rear, right

Connectors

X1	Instrument panel & Body	X36.3	Seat - Driver & Seat heated
X8	Instrument panel & Body	X37	Body & Front passenger seat
X19	Body & Seat heating - Rear	X37.1	Seat - Front passenger & Belt pretensioner assembly, Front passenger
X36	Body & Driver seat	X37.3	Seat - Front passenger & Seat heated
X36.1	Seat - Driver & Belt pretensioner assembly, driver		

Grounding Points

1	Body, front, left	4	A - pillar, left
---	-------------------	---	------------------

Abbreviations

10A	10 Ampere	F20	Fuse F20
15	Ignition voltage	F29	Fuse F29
20A	20 Ampere	LHD	Left-hand drive
30	Constant voltage	LSW	Light switch
58D	Dimmed voltage, instrument illumination	RHD	Right-hand drive
F15	Fuse F15		

Color codes

BK	Black	BKYE	Black-Yellow
BKBU	Black-Blue	BN	Brown

BKGN Black-Green

BKRD Black-Red

BKWH Black-White

GYYE Gray-Yellow

RD Red